


CURB AND GUTTER AT DRIVEWAY APPROACH

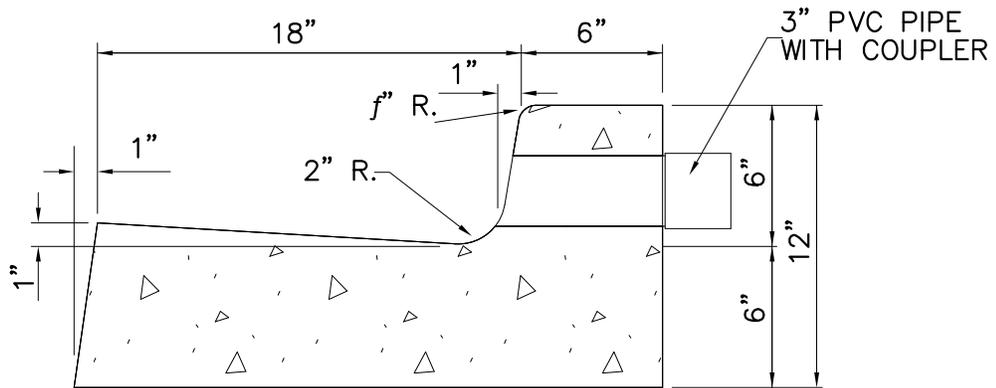

CURB AND GUTTER

NOTES

1. CONCRETE SHALL HAVE STRENGTH OF 3000 P.S.I. AT 28 DAYS.
2. TRANSVERSE CONTRACTION JOINTS – MAKE 1/8" X 1 1/2" DEEP CUT; SPACED AT 15'. PROVIDE CONTRACTION JOINTS AT CURB RETURN POINTS, CATCH BASINS AND DRIVEWAYS.
3. SCORE CURB OVER WEEP HOLE BLOCK OUT.
4. EXPANSION JOINTS SHALL NOT BE USED.
5. APPLY CURING COMPOUND (PETROLEUM BASED) TO FRESH CONCRETE TO RETAIN MOISTURE.
6. TOP OF CURB BRANDED WITH "S" OR "W", 2" MIN. HEIGHT FOR SEWER AND WATER LOCATIONS. HAND SCRIBING NOT ALLOWED.